
4429 E 139th St
Grandview, MO 64030
816.775.2044

CLOSET BUNDLE - INSTRUCTION MANUAL

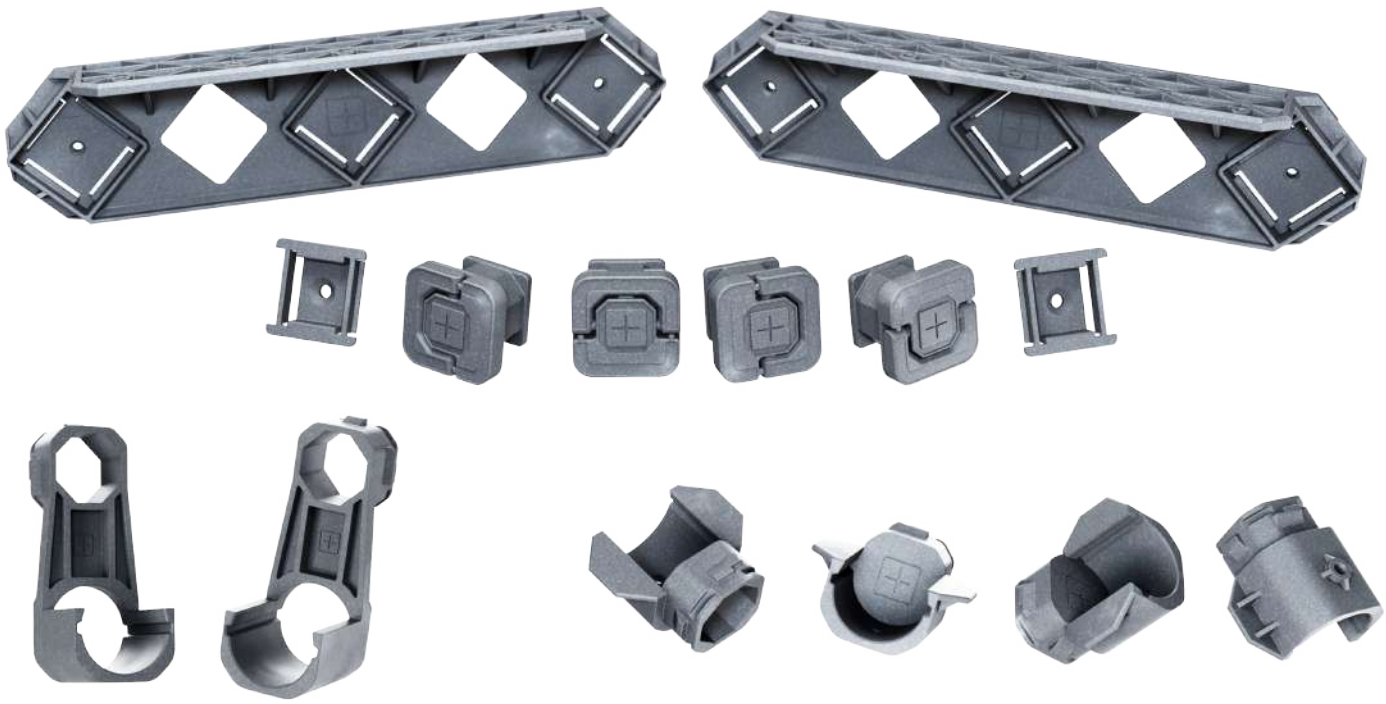

⚠ WARNINGS & GENERAL SAFETY

- Do Not use the Crates to stand on
- Do Not load more than 50 pounds

General Safety Information

- Adult assembly recommended. Product is recommened for ages 12 and older.
- Keep small parts away from children.
- Pinch point hazard - Use caution when folding, unfolding, stacking, or connecting crates.
- Always use Screw Clips to secure crate towers to the wall when stacking more than 3 crates high.
- Anchor crate towers securely to a wall before adding shelves, rods, or stored items.
- Do not hang, pull, swing, or climb on closet rods, shelves, or crate towers.
- Install and use only as instructed. Improper installation may cause tipping, falling, or product damage.

TOOLS REQUIRED FOR ASSEMBLY



Power Drill

Screwing in wall anchors and screws into the wall and shelf board.



Hammer

Snap the full side panels to the base.

LEARN MORE

Visit us @ ubecube.com

CLOSET BUNDLE ASSEMBLY


Stack Crates



1

Assemble and **stack the crates against the wall** to the desired tower height.


Insert & Mark

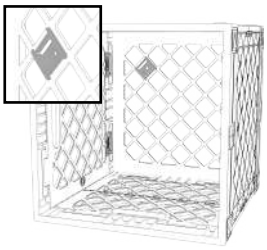

2

Snap the Screw Clip into an **inside grid opening and mark the wall** through the screw hole.


Drill Pilot Hole

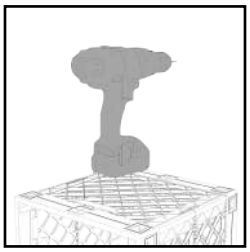

3

Remove the top crate, drill a pilot hole, and install the wall anchor.


Snap-Fit Connect

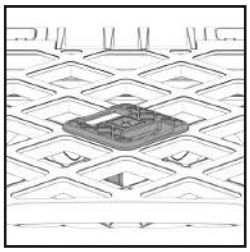

4

Reposition the crates and press Snap-Fit Connectors **through the aligned grid openings.**


Screw Into Wall

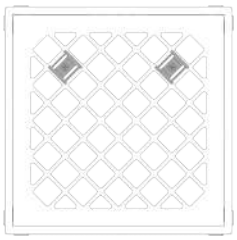

5

Screw through the Screw Clips to secure the tower to the wall.


Repeat 1-5

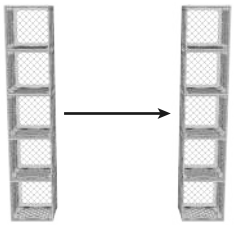

6

Repeat steps 1–5 for each closet tower.


Mount Strips

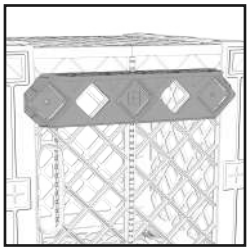

7

Mount the ClosetStrips **to the side of the crates** at the desired shelf height.

D-Ring To Crate

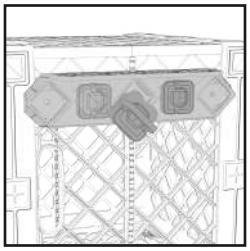

8

Secure each ClosetStrip **with two D-Rings,** then repeat for the other towers.


Place Shelf Board



9

Measure, cut, and finish the shelf board, then place it on the ClosetStrips.

Secure Board

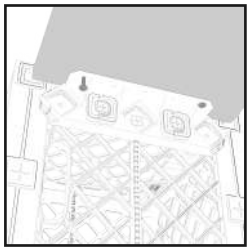


10

Confirm the board position, then drill up **through the ClosetStrip holes** to secure it.

CLOSET ROD INSTALL


Extension On Rod

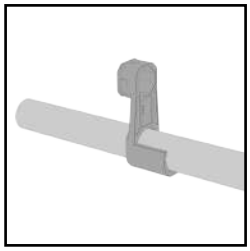

1

Slide the Rod Extensions onto each end of the closet rod.


Move To Strips

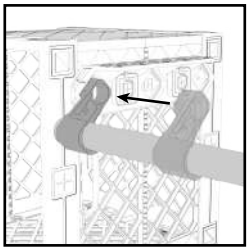

2

Place the rod assembly onto the ClosetStrips, **fitting each Rod Extension into the strip opening.**

1/4 Turn Extension

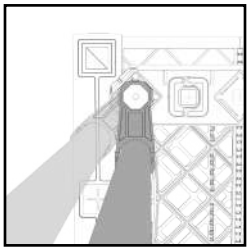


3

Quarter-turn the Rod Extensions to lock them in place.

RODSNAP INSTALL


1/4 Turn RodSnap

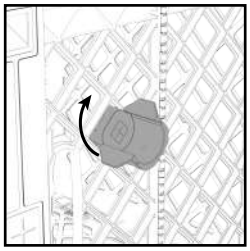

1

Insert each Rod Snap into the crate grid and **quarter-turn to lock.**

Snap In Rod

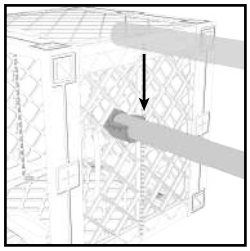

2

Snap the closet rod into the Rod Snaps on both crate towers.