UbeCube

4429 E 139th St
Grandview, MO 64030
816.775.2044

CRATEPREPPER PREPPERPANTRY - INSTRUCTION MANUAL





KIT INCLUDES:

- UC02 MOD Crate (x6)
- UC02 MOD Lidless Crate (x6)
- 1x2 Outfitter Kit (x1)
- 2x2 Outfitter Kit (x1)
- 1x3 Outfitter Kit (x1)
- 3x3 Outfitter Kit (x1)
- CrateShelf Kit (x4)
- ClosetStrips (x12)
- Whiteboard Panel (x6)
- Mylar Bag (x8)
- CrateHook 4 Pack (x1)
- D-Ring Connector (x24)
- Snap-Fit Connector (x24)
- Screw Clip Set (x6)

Wood Shelves are NOT included. Proper fitting shelves can be sourced from local hardware stores.

Calculating Shelf Dimensions

Width: 13.75" (1 Crates) + overlap

Length: 41.25" (3 Crates) + overlap

Recommended Dimensions


Width: 14"

Length: 42"

Thickness: 3/4" - 1"

UC02 MOD CRATE ASSEMBLY


Unpack & Level

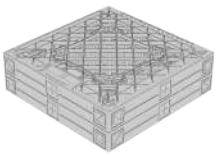

1

Remove packaging from around the crate. Place the crate on a flat, level surface with the **lid side facing up.**


Pull Up

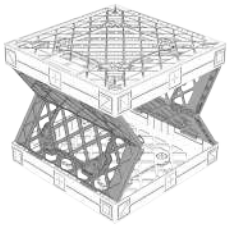

2

Grip the top rim of the crate on opposite sides and pull it upwards. **Pull out any accessories** from inside the crate.


Swing Down

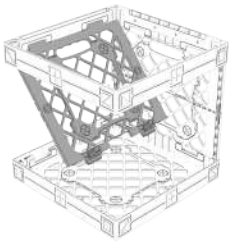

3

Swing down the two full side panels: Reach inside and pull down each full side panel until they are both positioned vertically.


Lock Sides

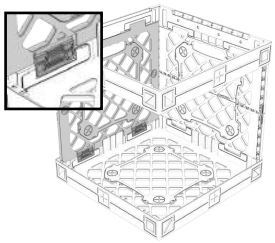

4

Lock the full side panels in place: Push down on the locks on each full side panel until they snap securely.

Inspect

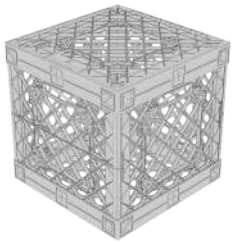


5

Ensure tabs are aligned: Make sure the tabs on the full side panels snap into the corresponding slots on the folding panels.

CRATESHELF™ KIT INSTALL


Place On Side

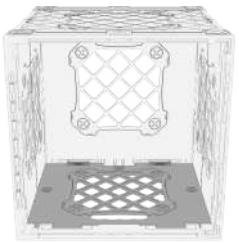

1

Open the lid and rotate the crate 90 degrees, positioning one full side panel flat on a hard surface.

Insert CrateFin

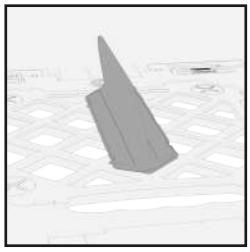

2

Insert the CrateFin into the side panel, ensuring both bumps on one side of the CrateFin align and fit through the openings on the panel.

Secure CrateFin



3

Use a hammer to tap each end of the CrateFin until it snaps through the panel and locks firmly into place.


Repeat



4

Rotate the crate 180 degrees and repeat steps 2 & 3 on the other full side panel making sure both CrateFins are firmly in place.

Slide In Shelf

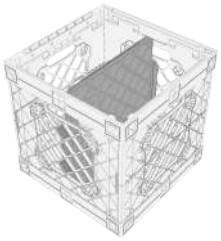


5

Once both CrateFins are secure, **slide the shelf panel** into place by guiding it over the CrateFins.

SIDE PANEL ASSEMBLY


Unlock Panel

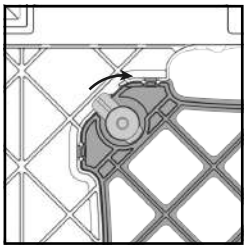

1

Place the crate on a flat, level surface. Turn each of the **four panel locks a quarter turn** to unlock them.


Pop Out Panel

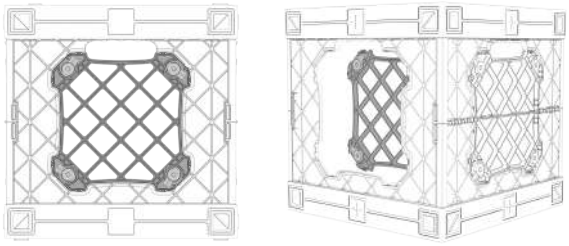

2

Release the panel by pushing inward on each of its four corners from the outside of the crate. This will "pop" the panel out.

Re-Secure Panel

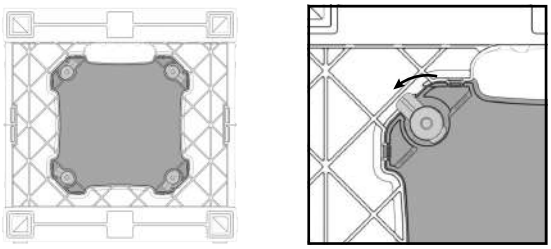


3

From the inside of the crate, push the panel back into place until it snaps securely on all sides. Turn all four panel locks back to their locked position.

CLOSETSTRIP INSTALL

D-Ring To Crate

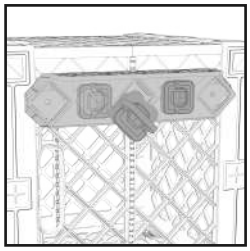

1

Mount each ClosetStrip™ at the desired shelf height and **secure it with two D-Rings**, then repeat on the remaining towers.


Place Shelf Board



2

Measure, cut, and finish the shelf board, then place it on the ClosetStrips.

Secure Board

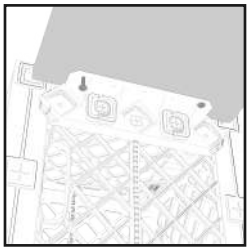

3

Confirm the board position, then drill up **through the ClosetStrip holes** to secure it.

GRABINET OUTFITTER INSTALL


Place On Side



1

Open the lid and rotate the crate 90 degrees, positioning one full side panel flat on a hard surface.

Insert CrateRails

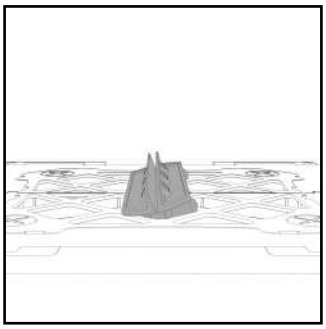

2

Insert the CrateRail/Fin into the side panel, ensuring both bumps on one side of the CrateRail align and fit through the openings on the panel.

Secure CrateRails



3

Use a Hammer to tap in the CrateRails/Fins into the side panel. Repeat on all other sides making sure both CrateFins are firmly in place.

Slide In Dividers





4

Once all CrateRails/Fins are secure, **slide the dividers** into place by guiding them through the CrateRails.

1x2 GRABINET

*CrateFins

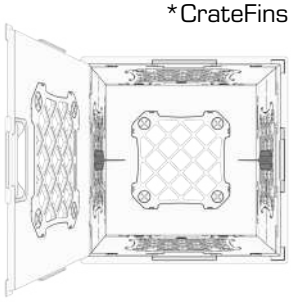


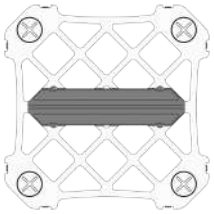

x2

2x2 GRABINET

*CrateRails

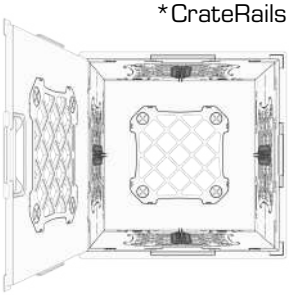





x4

1x3 GRABINET

*CrateFins

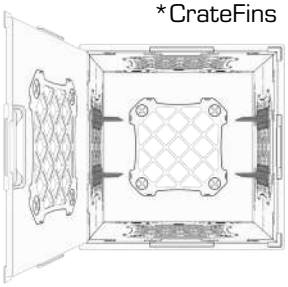


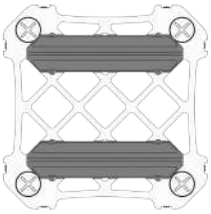


x4

3x3 GRABINET

*CrateRails

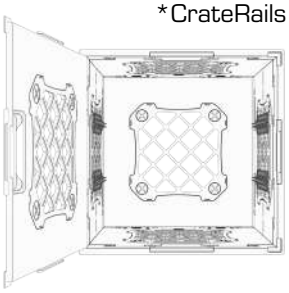

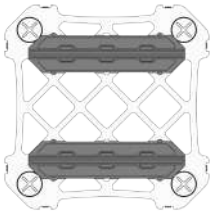

x4

SECURING THE CRATES


Stack Crates



1

Assemble and **stack the crates against the wall** to the desired tower height.


Snap-Fit Connect

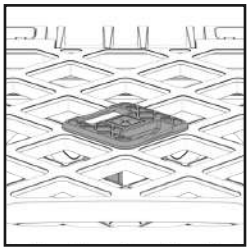

2

Press the Snap-Fit Connectors **through the aligned grid openings** until they snap in place to secure the tower.


Insert & Mark

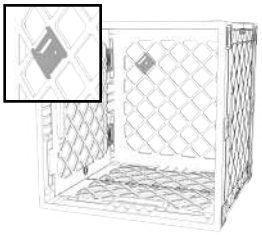

1

Snap the Screw Clip into an **inside grid opening and mark the Desk Top** through the screw hole.

Screw Into Wall

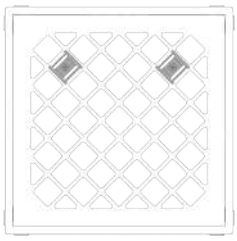

2

Remove the top, **pre-drill holes**, then reposition the top on the crates and **screw through the clip to secure.**

Visit us @ ubecube.com to learn more!!