UBECUBE

4429 E 139th St
Grandview, MO 64030
816.775.2044

CRATESHOT™ CLEANING TABLE - INSTRUCTION MANUAL



*Wooden Desk Top Not Included

KIT INCLUDES:

- UC01 Mod Locking Crate (x6)
- CrateShot™ Field Box (x2)
- Locker Panel (x6)
- CrateShelf™ Kit (x4)
- CrateHook™ (x8)
- Plier Holder (x4)
- Drill Holder (x1)
- Magnet Clip (x4)
- Snap-Fit Connector (x12)
- Screw Clip Set (x2)

⚠ WARNINGS & GENERAL SAFETY


- Do Not use the Crates to stand on
- Do Not sit on the Crate
- Do Not load more than 50 pounds

General Safety Information

- Read the instruction manual before use
- Keep the instruction manual for reference
- Recommended age of use is 12 years and older
- Pinch point hazard - Use caution when collapsing or erecting

UC01 CRATE ASSEMBLY


Unpack & Level

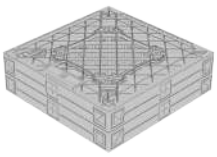

1

Remove packaging from around the crate. Place the crate on a flat, level surface with the **lid side facing up.**


Pull Up

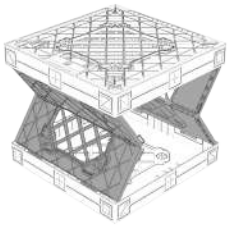

2

Grip the top rim of the crate on opposite sides and pull it upwards. **Pull out any accessories** from inside the crate.


Swing Down

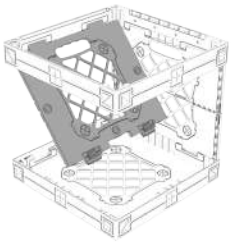

3

Swing down the two full side panels: Reach inside and pull down each full side panel until they are both positioned vertically.


Lock Sides

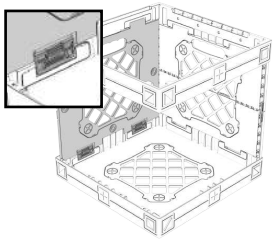

4

Lock the full side panels in place: Push down on the locks on each full side panel until they snap securely.

Inspect

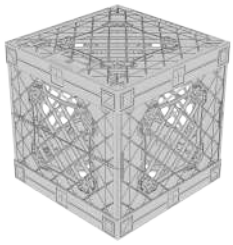


5

Ensure tabs are aligned: Make sure the tabs on the full side panels snap into the corresponding slots on the folding panels.


CRATESHELF™ KIT INSTALL

Place On Side

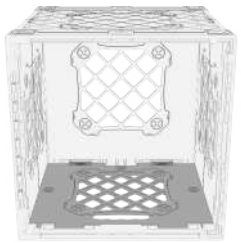

Open the lid and rotate the crate 90 degrees, positioning one full side panel flat on a hard surface.

Insert CrateFin

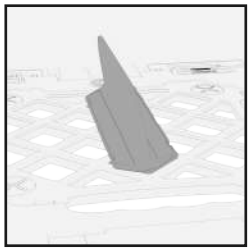

Insert the CrateFin into the side panel, ensuring both bumps on one side of the CrateFin align and fit through the openings on the panel.

Secure CrateFin




Use a hammer to tap each end of the CrateFin until it snaps through the panel and locks firmly into place.

Repeat



Rotate the crate 180 degrees and repeat steps 2 & 3 on the other full side panel making sure both CrateFins are firmly in place.


Slide In Shelf

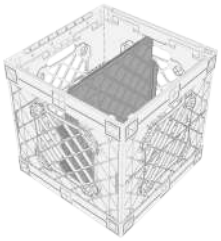

Once both CrateFins are secure, **slide the shelf panel** into place by guiding it over the CrateFins.


LOCKER PANEL ASSEMBLY

Unlock Panel

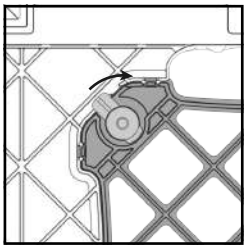


Place the crate on a flat, level surface. Turn each of the **four panel locks a quarter turn** to unlock them.

Pop Out Panel

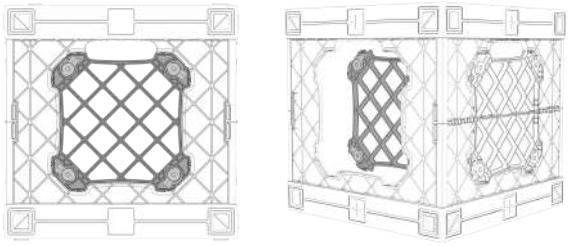

Release the panel by pushing inward on each of its four corners from the outside of the crate. This will "pop" the panel out.

Re-Secure Panel

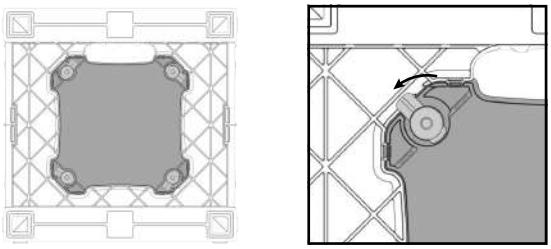

From the inside of the crate, push the panel back into place until it snaps securely on all sides. Turn all four panel locks back to their locked position.


SECURING THE TOWER

Stack Crates




Assemble and **stack the crates against the wall** to the desired tower height.

Snap-Fit Connect

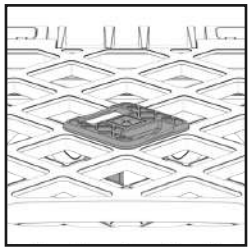


Press the Snap-Fit Connectors **through the aligned grid openings** until they snap in place to secure the tower.

Insert & Mark

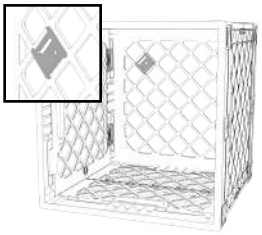

Snap the Screw Clip into an **inside grid opening and mark the wooden top** through the screw hole.

Screw Into Top

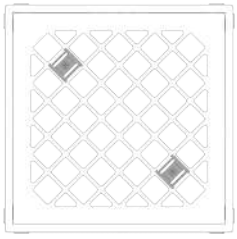

Remove the top, **screw pilot holes**, then reposition the top and **screw through the clip to secure.**

Calculating Desk Top Dimensions

Depth: 13.75" (crate dimension) + overlap

Length: (13.75" x2) + gap between towers

Recommended Dimensions

Depth: 15"

Length: 67.5"

Thickness: 1" - 1.5"